




CD/DVD Player


Startup Guide / Guide de démarrage / Anleitung für die Inbetriebnahme / Snelstartgids / Guida all'avvio / Guía de inicio rápido / Guia de Início Rápido / Οδηγός εκκίνησης / Startvejledning / Käynnistysopas / Uppstartguide / Instrukcja uruchamiania / Příručka spouštění / Használatba vételi útmutató / Ghid introductiv / Başlangıç Kılavuzu

1


A

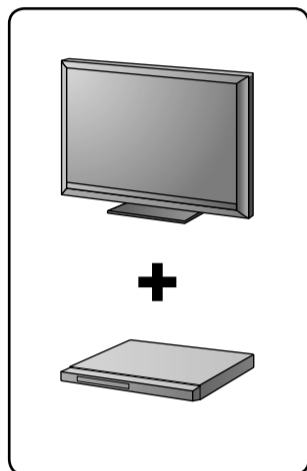


■ HDMI

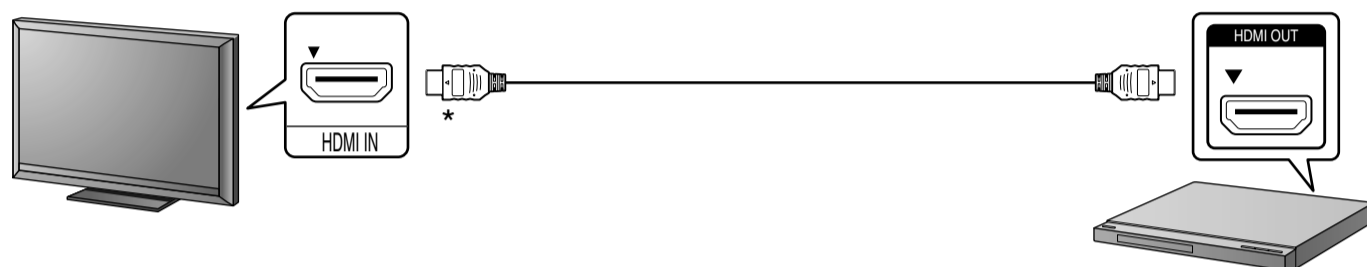


■ COMPONENT VIDEO & AUDIO

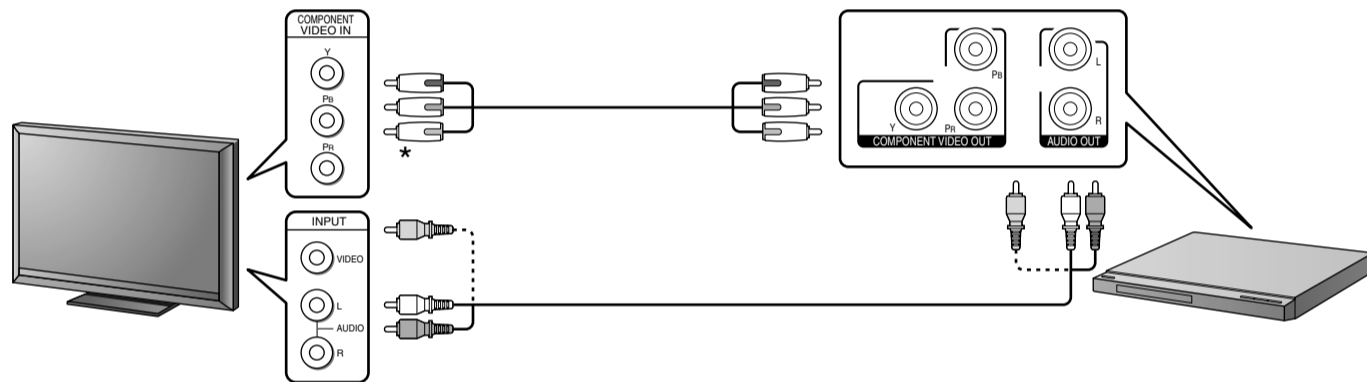


■ VIDEO & AUDIO

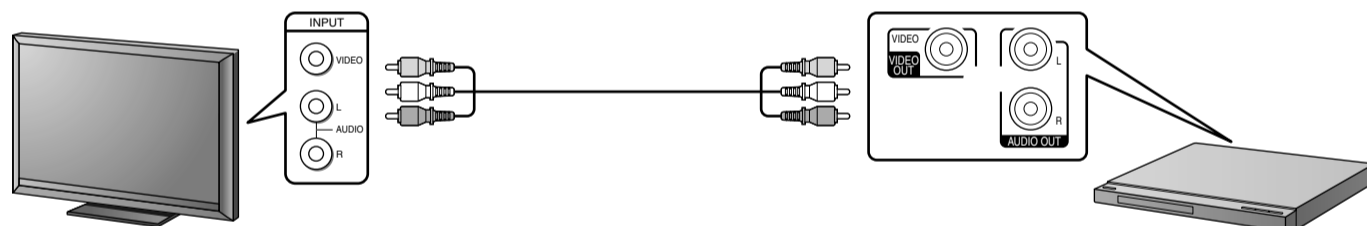


B

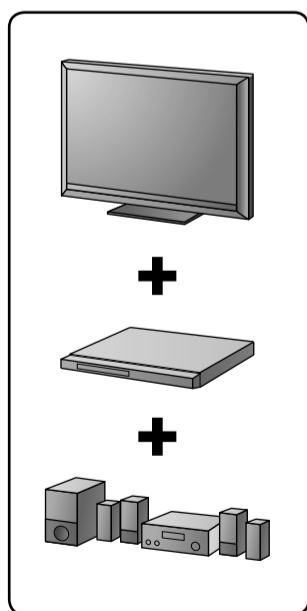

■ HDMI

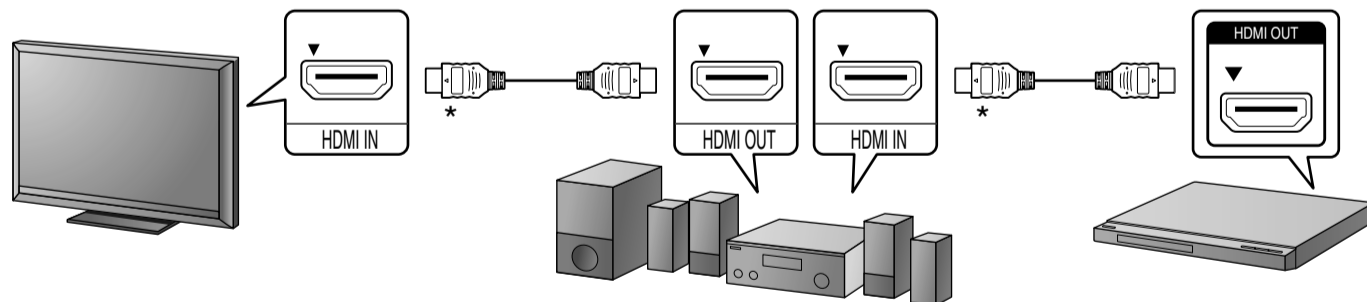


■ COAXIAL

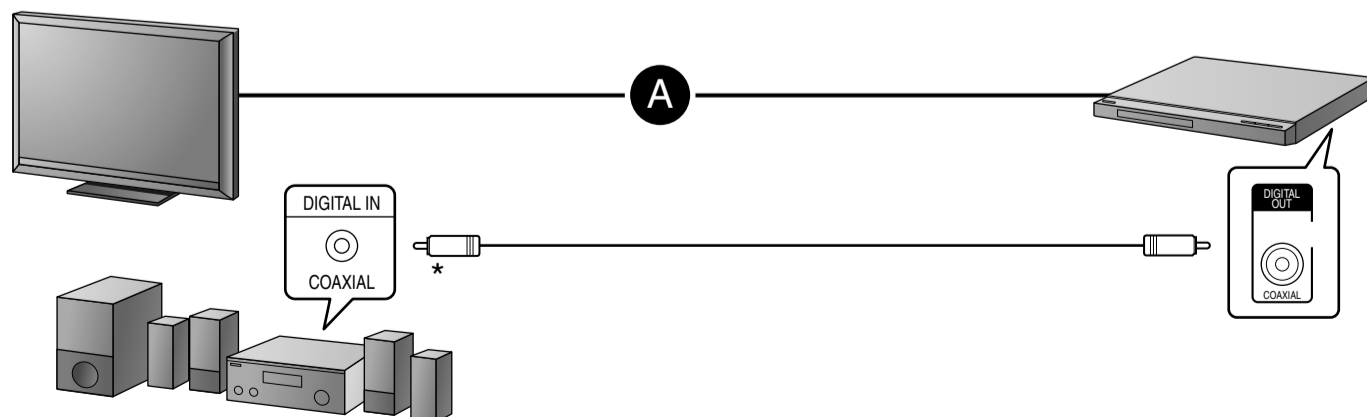


* Not supplied / Non fornito / Nicht mitgeliefert / Niet bijgeleverd / Non in dotazione / No suministrado / Não fornecido / δεν παρέχεται / Medfølger ikke / Ei sisälly vakiovarusteisiin / Medföljer ej / Nie należy do wyposażenia / Není součástí dodávky / Külön megvásárolható / Nu este inclus / Birlikte verilmez

2



1

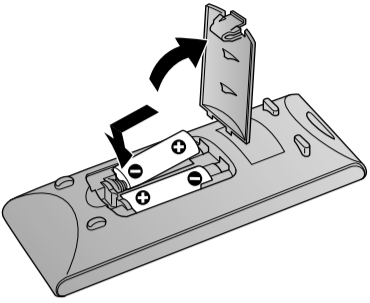

2

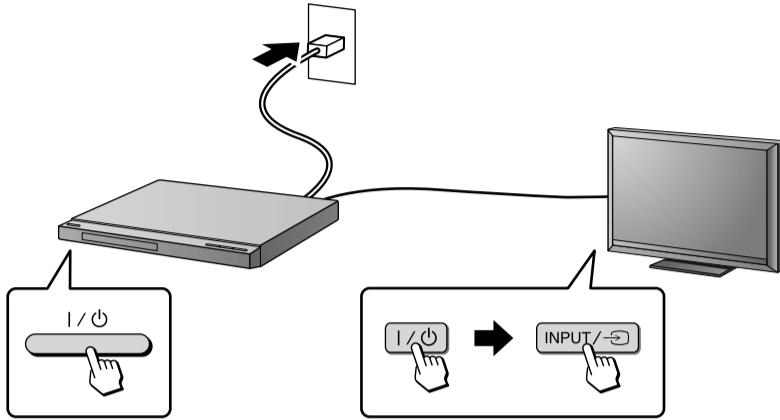


3

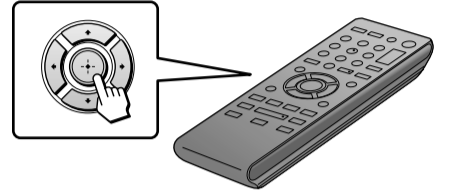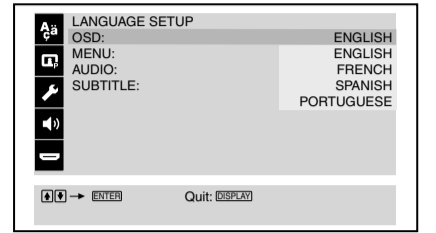


3

1

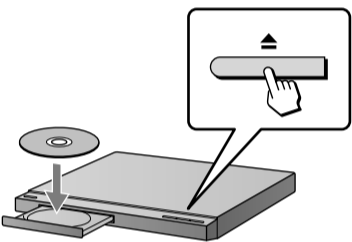

2

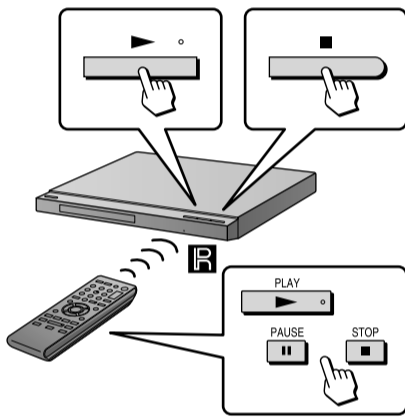

PICTURE NAVI

TOP MENU

TIME/TEXT

AUDIO

SUBTITLE

MENU

DISPLAY

Navigation and Playback Controls:

- Left arrow: Previous chapter
- Right arrow: Next chapter
- Home button: Main menu
- Play/Pause: Play/Pause
- Stop: Stop
- Fast Play: Fast forward
- Slow Play: Slow motion
- Replay: Repeat
- Advance: Skip forward
- Next: Next chapter