




# CD/DVD Player

Startup Guide / Guide de démarrage / Anleitung für die Inbetriebnahme / Guida all'avvio / Guía de inicio rápido / Snelstartgids / Startvejledning / Uppstartguide / Käynnistysopas / Guia de Início Rápido / Οδηγός εκκίνησης / Başlangıç Kılavuzu / Příručka spouštění / Használatba vételi útmutató / Ghid introductiv / Instrukcja uruchamiania / Руководство по началу работы / Посібник із налаштування / Іске қосу нұсқаулығы

## 1

### A

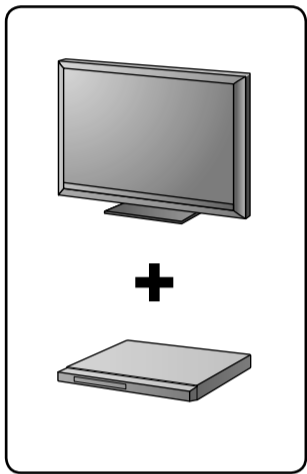


#### SCART




#### VIDEO & AUDIO




### B

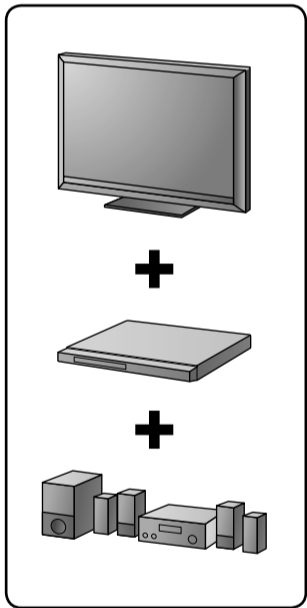


#### COAXIAL

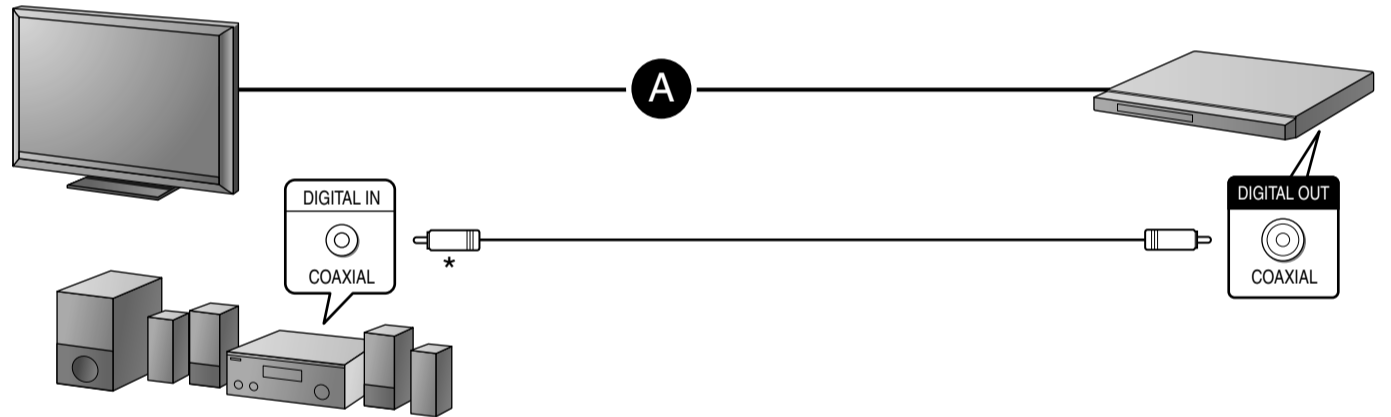

#### SCART & AUDIO

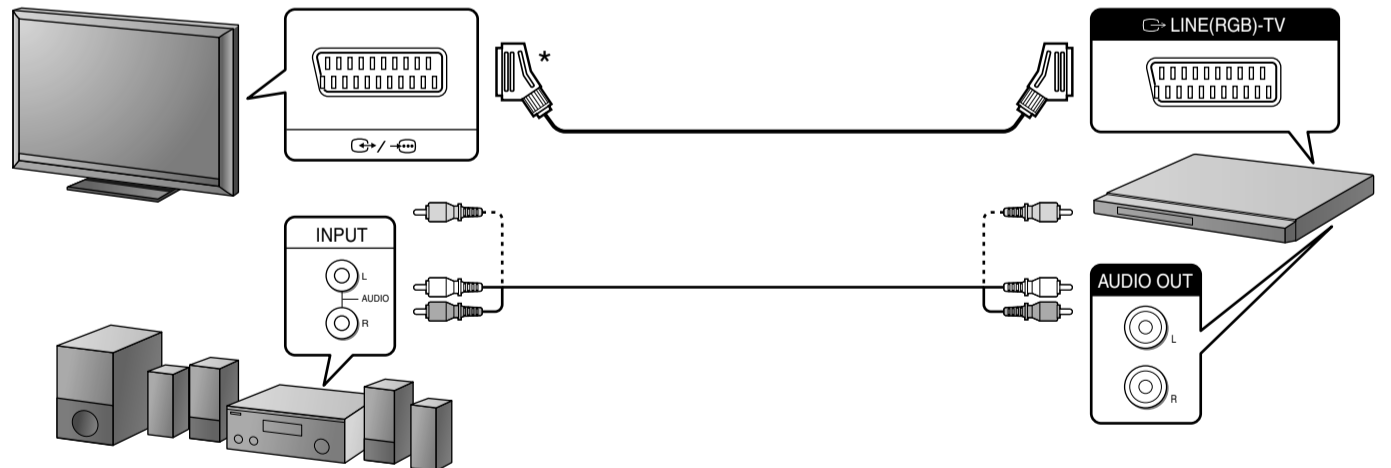

#### VIDEO & AUDIO

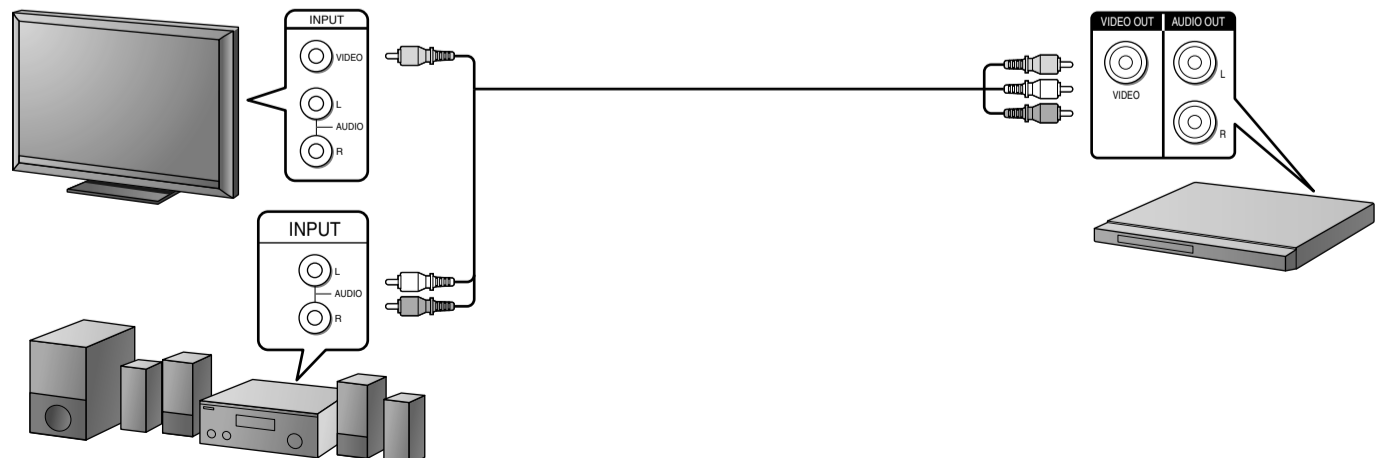


\* Not supplied / Non fornito / Nicht mitgeliefert / Non in dotazione / No suministrado / Niet bijgeleverd / Medfølger ikke / Medföljer ej / Ei sisälly vakiovarusteisiin / Não fornecido / Δεν παρέχεται / Birlikte verilmez / Není součástí dodávky / Külön megvásárolható / Nu este inclus / Nie należy do wyposażenia / Не прилагается / Не поставляется / Берілмерген


I / ⏻ : on/standby / marche/veille / Ein/Bereitschaft / accensione/attesa / encendido/en espera / aan/wachtstand / tændt/standby / på/standby / virta/valmiustila / ligado/em espera / σε λειτουργία/σε αναμονή / açık/beklemede / zapnuto/pohotovost / be/készlet / pornit/veghe / właczone/oczekiwanie / вкл./ожидание / увімкнене/ очікування / қосулы/күту

# 2



1

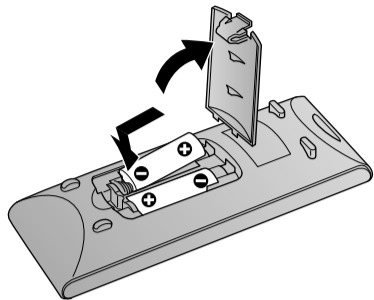

2

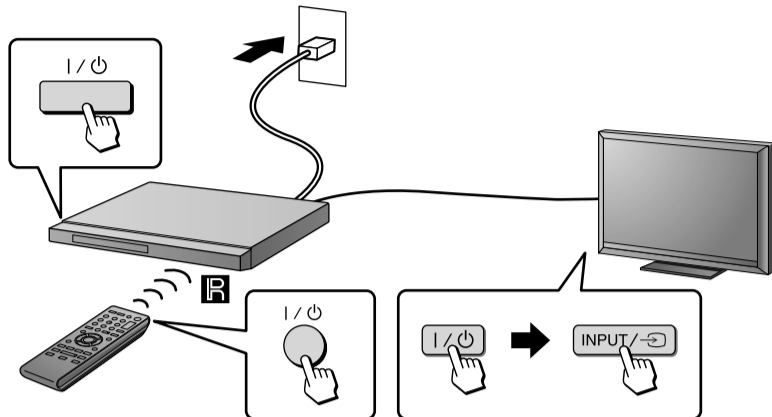


3

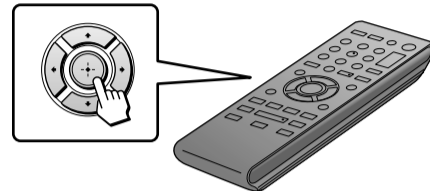
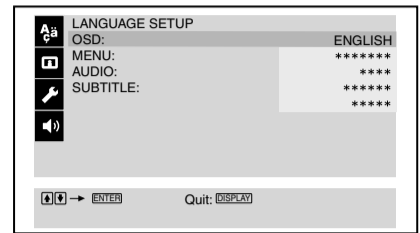


# 3

1

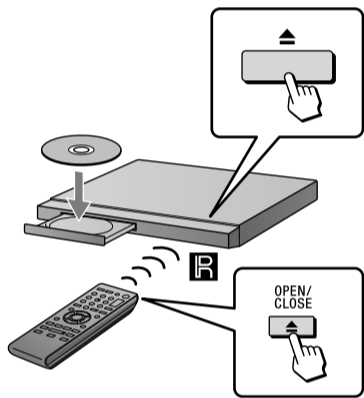

2

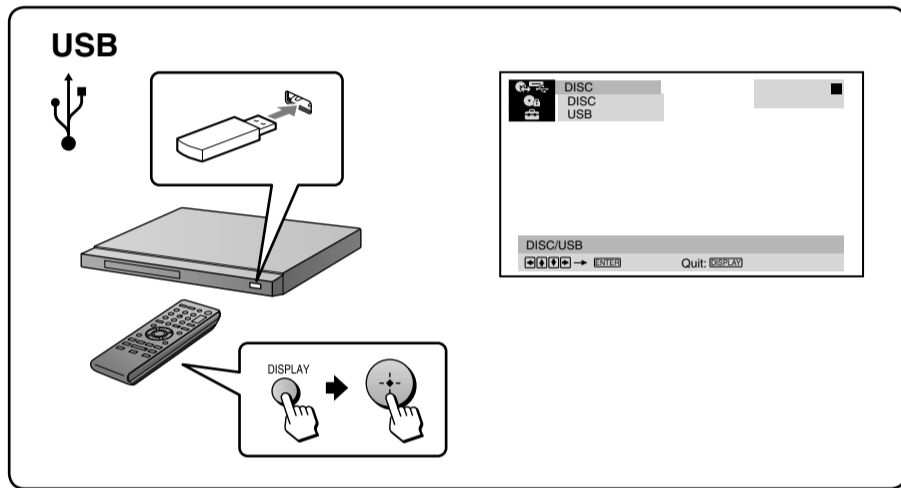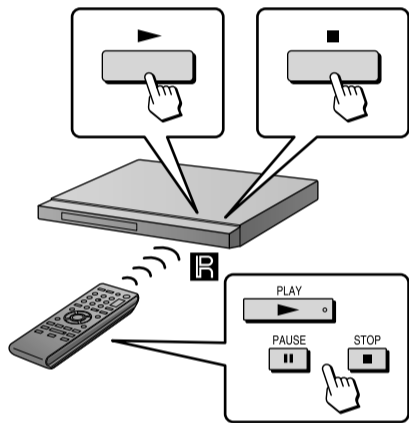

**TIME/TEXT**

**PICTURE NAVI**

**AUDIO**

**SUBTITLE**

**MENU**

**DISPLAY**